


Technical specifications for label creation

Label template for
screw cap (for screw jar)
262 ml (Ø 87 mm)

Example image



Printing by external or internal print shop With bleed, no crop marks

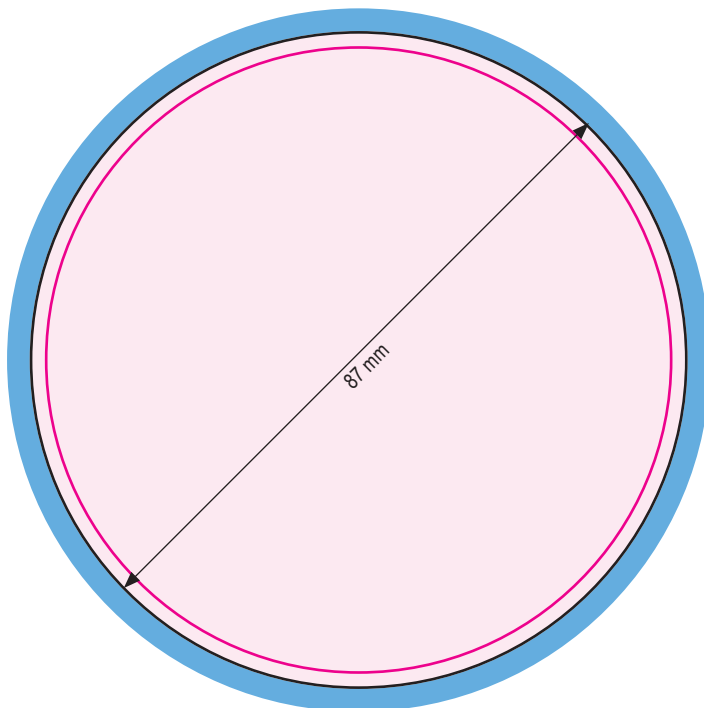

Black border line is for viewing purposes only;
please do not create in the data.

Text is at least 2 mm from the edge

Blue border = 3 mm bleed, crop marks

Colors: 4c or Pantone/HKS spot color, please indicate

Black text must be 100% spot black color and overprinted to avoid
registration errors and unwanted white edges

Scale symbols correctly

Create print files using Adobe graphic design software

Resolution: 300 dpi

Format: PDF X3 / X4

Contents next page



Technical specifications for label creation

Label template for screw cap (for screw jar) 262 ml (Ø 87 mm)

Contents (example size 1:1)

DESIGNATION
Minimum dot size 7 pt.
Type and color variable

LOGO & ADDRESS
Minimum dot size 4 pt.
Type and color variable




CONTENTS
(Contents in ml or g | paste | color)
Minimum dot size 7 pt.
Type and color variable

ICONS
Do not change sizes
Enter reference values (°C|°F)

REF / LOT / Version / Number / Date
Minimum dot size 5 pt.
Type and color variable

Visible areas

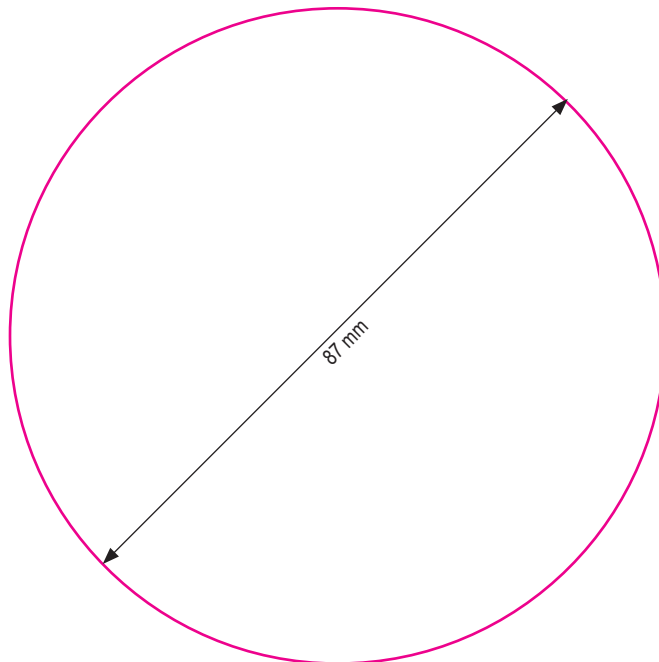

Icons



(For CE only)
Minimum height 5 mm

